



# Commonwealth Trailer Rentals, Inc.

866-839-3495 | [www.rentctr.com](http://www.rentctr.com)

## Helpful Hints for Live Floor Trailers

1. Live floor trailers require hydraulic pressure to be between 1800 and 2000 psi. tractors with PTO pumps of 1500 – normally used for dump trailers applications - will not operate the floor.
2. Hydraulic reservoir must be 50 gallons or more. Use of a 30-gallon tank will cause the hydraulic fluid to overheat which could result in severe damage to the trailer.
3. Doors must be opened before the unloading operation begins. Failure to open the doors prior to running the floor will damage the doors and hinges - resulting in additional charges for repairs.
4. The renter is responsible for supplying the hydraulic hoses which connect the tractor to the trailer; if the trailer has hoses they may be used or altered by the renter to suit their needs. Standard intake and exhaust hydraulic lines require 1-inch fittings.
5. Customer agrees to make trailers available when PM's and Inspections are due.
6. Check and fill hydraulic fluid on truck before beginning floor operation.

\_\_\_\_\_  
Customer Name

\_\_\_\_\_  
Contract #

\_\_\_\_\_  
Customer Signature

\_\_\_\_\_  
Date

COMMONWEALTH TRAILER RENTALS, INC.

**25**  
1994-2019

**25 YEARS SERVICE**

\*Providing the highest quality customer service...the first time.\*